Pet Remote Training Collar for 3 Dogs

User Manual

Model: SP 403

This is an effective 3 pets training system, specially designed for those who wish to train up to 3 dogs simultaneously and independently. It features an easy-to-use transmitter, 4 audible tones of different frequencies, and 4 levels of static shock, replaceable batteries and 200 meters range.

Contents:

- 1 x Transmitter
- 1 x 6F22 9V Battery
- 1 x Antenna (for transmitter)
- 1 x 3 Adjustable Collar Receivers
- 3 x 6V Batteries
- 1 x Test Light (for checking static shock)
- 1 x User Manual

Good Pets Make happy Owners®
SmartPets

Quick start Guide

Step 1: Prepare the Remote Transmitter

Screw the antenna into place before using. Do not operate the remote trainer without a transmitter antenna. Follow the Positive (+) and Negative (-) signs inside the transmitter. Insert the 9V 6F22 battery into the transmitter correctly.

Step 2: Prepare the Collar Receiver

Insert the 6V (4LR44) battery into the receiver collar following the positive (+) and negative (-) signs. The collar will beep when you install the battery into receiver correctly, and LED indicated light will stay on for 2 second. Collar is in the standby mode and ready to receive signal, which will consume a small amount of electricity.

Step 3: Match Transmitter with the Collar Receivers

1. Press and hold A button on the transmitter. The LED indicated light on the transmitter will stay on for about 2 seconds and then turn off. Keep holding the

LAVA Electronics Inc. Copyright 2009-2010, All Rights Reserved

A button and wait until the LED indicated light of transmitter start blinking (the transmitter is in the matching mode).

2. Randomly pick the collar receiver that has same color as A button, align the two blue paper dots (matching point) on the transmitter and the collar receiver as close as possible (distance not over 2mm).
3. You will hear one beep from the receiver and the LED indicated light keeps on for 2 second then turn off. Release A button now and LED light on the LED indicated light on transmitter will turn off.

Repeat the above steps for Button B, C and for the other two collar receiver. Once matching finished all the collar receivers will work independently.

Step 4: How to Check the Static Shock

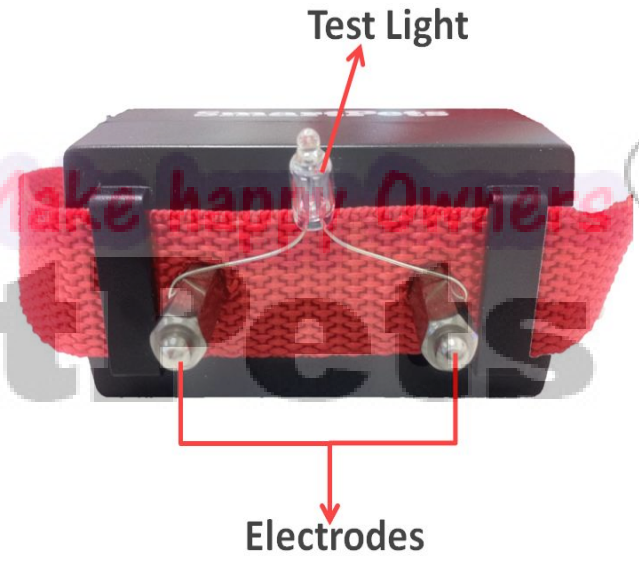

1. Use the **Test Light** attach on the both side of Electrodes (Metal).
2. Press Shock Button, the **TEST LIGHT** will blink or keeps on.

Step 5: Adjust the collar to fit your pets

To ensure a proper fit, please follow the steps below:

1. Put the collar receivers on your pets.
2. With your dog standing, centre the collar receiver where contact points are underneath your pet's neck, touching the skin. If your dog has a long or thick coat, trim the hair around the contact points to ensure consistent contact.
3. The collar receiver should fit snugly, yet loose enough to allow on finger to fit between the strap and your dog's neck. If the strap is too long for your dog, cut off the excess length.
4. Allow your dog to wear the collar for several minutes and then recheck the fit. Check the fit again as your dog becomes more comfortable wearing the collar receiver.

Notice:

Please always install the Transmitter's battery BEFORE install the receiver's batteries because it is a wireless training system. The Transmitter has to be power on, and then

LAVA Electronics Inc. Copyright 2009-2010, All Rights Reserved

the receiver is able to receive the code from transmitter. It might not work if install the batteries incorrectly or did not match the receiver and transmitter correctly.

How to use the transmitter and receivers

Press the A button, the receiver A is in the work mode. Press the B Button, the receiver B is in the work mode. Press the C Button, the receiver C is in the work mode.

Button 1- 4 are for 4 different audible tones,

Button 5- 8 are for 4 different static shock. (Increase in static shock),

Notice:

Only for the C collar receiver, the Button 5 -8 are for the different static shock with audible tones (only for C collar receiver).

We would recommend you to use the tone function first before starting the static shock and always start from the lowest level of static shock.

How to change the batteries

It is important to check the battery regularly by monitoring indicated light to ensure the collar is working properly.

If the Receiver LED indicated light does not light up please replace the batteries of receiver. If the Transmitter indicated light does not light up please replace the battery of transmitter.

Important:

1. **You need to re-do the matching process every time after you replacing the battery either transmitter or collar receiver.**
2. **The LED light on the transmitter will turn on when you press buttons to send signal to the collar receiver. Please wait the LED light turns off before sending a new signal. DO NOT hold the static buttons (Button 5 – 8) too long.**
3. **Except during the matching process, DO NOT hold A, B and C button for more than 3 Seconds to avoid changing of matched codes on the Transmitter.**
4. **If the transmitter is interfered and sends out wrong signals, please re-match it with the collar receiver.**
5. **The valid distance of remote control means the straight-line distance between the transmitter and the receiver without obstacles in between. If there are**

LAVA Electronics Inc. Copyright 2009-2010, All Rights Reserved

interference signals or signal screening around, the actual remote control distance may vary.

6. The lifetime of the batteries vary according as how often you use the product. Therefore you should often check the batteries by watching the indicator light in the receiver and the indicator sign on the LCD screen of the transmitter.
7. This product is for pet training. Only by training, the pet can understand d the intention of its owner. Good effect can only be achieved after a period of training.
8. This product is a wireless transmitting device; you MUST NOT use the remote control system in places like petrol stations or hospitals where mobile phones are prohibited. Patients using heart pacemaker are forbidden to use this product.
9. The Electrodes have to direct contact with your pet's skin as it is very important to effective training.
10. This product is only for Pet Training, It is not a regular Pet Collar. Please remove it from your pet at least 8 hours out of every 24 hours.

Good Pets Make happy Owners ®
SmartPets

We would recommend you to use the Beep Mode first before starting the static shock and always start from the lowest level of static shock.

CE

Made in China

LAVA Electronics Inc. Copyright 2009-2010, All Rights Reserved